



50W LED WORK LIGHT WITH TRIPOD
INSTRUCTION MANUAL



Ref.1439050

Specifications

Model	Rated Voltage	Cable Length	Rated Power	IP Rating	Chip and Lumination	Beam Angle
1439050	230V 50Hz	3M	1X50W	IP65	4000LM	130°

Before using this product, please read the instruction manual carefully and check if there are some damaged components. If you notice any damage, the product cannot be installed.
Retain this information for future reference.

Security Warning:

- Do not look directly at lighted floodlight.
- Never operate the floodlight with wet hands or if you are staying on wet ground.
- Keep the light away from environment with existing danger of explosion, flammable surfaces and objects. Danger!!!
- Keep this product out of reach of children or any unauthorized persons.
- Installation and maintenance and repair should be done by a qualified electrician.
- Do not mount the unit in the ceiling or on a mast(pole).
- Before using the device, make sure that all screws are properly tightened.
- Always disconnect the power, unplug before working at.



- The minimum distance of the illuminated surface is 0.5m.
- Do not use the projector without a properly installed safety glass.



- Whenever the glass breaks, it should be replaced immediately.
- If the power cable became gray or find any changed of outside, please contact with seller or professional people to repair.
- The grounding screw must be tightened.

Installation

Mount the floodlight housing to the top of the telescoping pole by tighten the center knob clockwise until secure (Abb.1). Do not over tighten. Place the telescoping pole into hole (A) and (B). Mount the screw nut at the bottom of telescoping pole by tightening the screw. Open the umbrella stand and tighten the locking nut at desired height (Abb.2). Adjust the telescoping pole to desired height by loosening and tightening lock nuts located at the top of extension (Abb.3). Your floodlight is now ready for use.



Abb.1

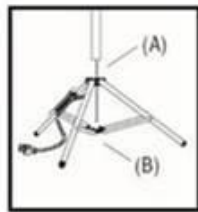


Abb.2

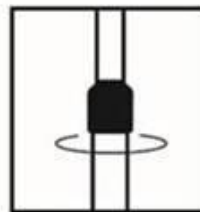


Abb.3